




Galpa Export WHIRLPOOL DRYER PARTS

<p>G4011201</p>  <p>AMANA BELT DRYER WP4011201 / 4011201</p>	<p>G3394508</p>  <p>BEARING RING FOR DRYER WHIRLPOOL 3394508 / WP3394508 FSP</p>	<p>G0145.5</p>  <p>BEARING RING FOR DRYER WHIRLPOOL WP3394509 / 3394509 / 337651 FSP</p>	<p>G661570</p>  <p>BELT DRYER "WHIRLPOOL" 661570 / 3387610</p>	<p>G0339.506</p>  <p>BELT DRYER FOR WHIRLPOOL / MAYTAG / KENMORE 341241 / 349533 / 31531589 / W10131364</p>
<p>G3394652</p>  <p>BELT DRYER FOR WHIRLPOOL 345675 / 3394652 FSP</p>	<p>G3394652AP</p>  <p>BELT DRYER FOR WHIRLPOOL 345675 / 3394652 JASON</p>	<p>G31531589</p>  <p>BELT MAYTAG DRYER 31531589 (REPLACED 341241)</p>	<p>G33002535</p>  <p>BELT MAYTAG DRYER 33002535</p>	<p>GY312959</p>  <p>BELT MAYTAG WPY312959 / Y312959</p>
<p>G31001043</p>  <p>BLOWER WHEEL DRYER MAYTAG 31001043</p>	<p>G31001317</p>  <p>BLOWER WHEEL DRYER MAYTAG 31001317</p>	<p>G33001790</p>  <p>BLOWER WHEEL DRYER MAYTAG 33001790 / 31001377 / 516674</p>	<p>G33002797</p>  <p>BLOWER WHEEL DRYER MAYTAG 33002797 / WP33002797</p>	<p>G696426</p>  <p>BLOWER WHEEL DRYER WHIRLPOOL 696426</p>
<p>G697772</p>  <p>BLOWER WHEEL DRYER WHIRLPOOL 697772 / WP697772</p>	<p>G279711</p>  <p>BLOWER WHEEL DRYER WHIRLPOOL WP694089 / 279711 / 694089</p>	<p>GWPW10349492</p>  <p>BLOWER WHEEL DRYER WHIRLPOOL WPW10349492, W10168564.</p>	<p>GW10116565</p>  <p>CONTROL ELECT/BOARD W10116565 (DISCONTINUED)</p>	<p>W10450081</p>  <p>CONTROL ELECT/BOARD W10450081</p>
<p>G8566150</p>  <p>CONTROL ELECT/BOARD WHIRLPOOL 8566150 (DISCONTINUED)</p>	<p>G8558178</p>  <p>CONTROL ELECTRONIC BOARD WHIRLPOOL 8558178</p>	<p>G8563974</p>  <p>CONTROL ELECTRONIC BOARD WHIRLPOOL 8563974</p>	<p>GW10110658</p>  <p>CONTROL ELECTRONIC BOARD WHIRLPOOL W10110658</p>	<p>GW10110659</p>  <p>CONTROL ELECTRONIC BOARD WHIRLPOOL W10110659</p>
<p>GW10111606</p>  <p>CONTROL ELECTRONIC BOARD WHIRLPOOL W10111606 / WPW10111606 / 3978981 / 3978994 / W10050520</p>	<p>GW10141671</p>  <p>CONTROL ELECTRONIC BOARD WHIRLPOOL W10141671</p>	<p>GW10450081</p>  <p>CONTROL ELECTRONIC BOARD WHIRLPOOL W10450081</p>	<p>G8546219</p>  <p>CONTROL ELECTRONIC BOARD WHIRLPOOL WP8546219 / 8546219 / 3978889 / 3978917 / 3978918 / 3978918R / 3980062 / 3980062R / 661653 /</p>	<p>G0334.005</p>  <p>DOOR LATCH WHIRLPOOL 279570 FSP</p>



Galpa Export WHIRLPOOL DRYER PARTS

<p>G8283288</p>  <p>DOOR SWITCH WHIRLPOOL 8283288 / WP8283288 / 4165281 / 4371407 / 8519323 / 865677 (3 WIRES) FITS WPW10318609 / W10318609 / 8574875 / G2231.402</p>	<p>G31001356</p>  <p>DRUM GLIDE MAYTAG 31001356</p>	<p>GWPW10359272</p>  <p>DRUM ROLLER AXLE WHIRLPOOL WPW10359272 / W10359272 / 8575325 / 3399509 / 3387707</p>	<p>G500214</p>  <p>DRUM ROLLER DRYER AMANA 500214</p>	<p>GWP31001096</p>  <p>DRUM ROLLER DRYER WHIRLPOOL WP31001096 / 31001096 / 531578 / 530642 / K35-247 / 53-1578 / 53-0642 / 53-0163</p>
<p>G2231.402</p>  <p>DRUM SUPPORT, WHIRLPOOL FSP 349241T / 3397588</p>	<p>G31001556</p>  <p>DRYER IGNITER MAYTAG 31001556</p>	<p>G339392</p>  <p>DRYER LINT FILTER WHIRLPOOL FSP 339392 / 339392V / 337133 / 337448 / 337451 / 337488 / 338405 / 338406 / 339391 / 339392BULK / G8557861</p>	<p>G8531967</p>  <p>DRYER LINT FILTER WHIRLPOOL FSP 8531964 / 8531967 / W10812395 / 348399 / 348400 / 685273 / TJDE964 / W10828351 / W10828351VP</p>	<p>GW10120998</p>  <p>DRYER LINT FILTER WHIRLPOOL FSP W10120998 / 1206293 / 3390721 / 8066170 / 8572268 / W10049370 / W10120998VP / W10178353</p>
<p>G8572270</p>  <p>DRYER LINT FILTER WHIRLPOOL FSP WP8572270</p>	<p>GWPW10717210</p>  <p>DRYER LINT FILTER WHIRLPOOL FSP WPW10717210 / 26000348851 / 2007 / 2006 W10717210 / W10641634 / 99989681 / 99989680 / 85659728559787</p>	<p>G8557861</p>  <p>DRYER LINT FILTER WHIRLPOOL W10874409 / 8558467 / 8557861 / 8559786 / W10860233 / WP8559786 / WP8557861 / W10726386 / 341256 / G0155.29</p>	<p>G694674</p>  <p>DRYER THERMOSTAT WHIRLPOOL 694674 / 341146 / 660039</p>	<p>GWP8566184</p>  <p>DRYER TIMER WHIRLPOOL WP8566184 / 8566184 / 8566184R</p>
<p>G8566209</p>  <p>DUCT SEAL WHIRLPOOL 8566209</p>	<p>G0155.24</p>  <p>FELT REAR SEAL DRYER WHIRLPOOL "FSP" ROJO</p>	<p>G0155.29</p>  <p>FELT REAR SEAL DRYER WHIRLPOOL "FSP" VERDE</p>	<p>G3406130</p>  <p>FELT SEAL REAR WHIRLPOOL W10612022 / 3406130 / 279857 / W10856781 / W10725245 / W10663495 / W10663495 / W10389561 / W10352407 / PS8691753 / G3392519</p>	<p>G3406129</p>  <p>FELT SEAL WHIRLPOOL W11035878 / 3406129 / WPW10663510</p>
<p>G338906</p>  <p>FLAME SENSOR DRYER WHIRLPOOL WP338906 / 303377</p>	<p>G306508</p>  <p>FRONTAL DRUM GLIDE KIT MAYTAG 306508 / 1309 / 3-12941 / 3-6508</p>	<p>G3399849</p>  <p>FUSE THERMAL "FSP" WP3399849 / 3399849</p>	<p>G3392519</p>  <p>FUSE THERMAL BLOWER HOUSING COVER WHIRLPOOL WP3392519 / 3392519 3388651 / 694511 / 80005 / ET401</p>	<p>G3390719</p>  <p>FUSE THERMAL FOR DUCT "FSP" 3390719</p>
<p>G3403140</p>  <p>FUSE THERMAL FSP W10423382 / 3403140 / WPW10423382, (obsoleto)</p>	<p>G279918</p>  <p>GAS DRYER CONVERSION KIT GAS TO LP 279918</p>	<p>G49572</p>  <p>GAS DRYER CONVERSION KIT GAS TO LP replaces 694572 / 49572 / 49575 / 49752</p>	<p>GLA-1044</p>  <p>HEATER DRYER MAYTAG LA-1044 / LA1044</p>	<p>G4391960</p>  <p>HEATER ELEMENT "FSP" 279247 / 4391960 / 279698</p>



























Galpa Export WHIRLPOOL DRYER PARTS

<p>G279843</p>  <p>HEATER ELEMENT "FSP" WP279843 / 279843 / 3398062</p>	<p>G2035.801</p>  <p>HEATER ELEMENT FSP WHIRLPOOL 279606 (DISCONTINUED)</p>	<p>G3387747</p>  <p>HEATING ELEMENT DRYER WHIRLPOOL 3387747</p>	<p>G3387748</p>  <p>HEATING ELEMENT DRYER WHIRLPOOL 3387748 / W10864898</p>	<p>G8544771</p>  <p>HEATING ELEMENT DRYER WHIRLPOOL 8544771 / WP8544771</p>
<p>G8573069</p>  <p>HEATING ELEMENT DRYER WHIRLPOOL WP8573069 / 8573069</p>	<p>GW10118756</p>  <p>IDLER ASSEMBLY WHIRLPOOL W10837240 / W10547290 / W10118756</p>	<p>G279640</p>  <p>IDLER PULLEY WHIRLPOOL 279640</p>	<p>G279311</p>  <p>IGNITER KIT WHIRLPOOL GAS DRYER 279311</p>	<p>G4391996</p>  <p>IGNITER KIT WHIRLPOOL GAS DRYER 4391996</p>
<p>G37001184</p>  <p>KNOB MAYTAG 37001184 / 31001385</p>	<p>G8566061</p>  <p>KNOB WHIRLPOOL WP8566061 / 8566061</p>	<p>G3392100</p>  <p>LEVELING LEG DRYER 3392100 / 49621 / 279810 / 1373044 / 3392100 / 40021 / 4319350 / 49591 / 49621 / 688222 / 8221</p>	<p>GW10136369</p>  <p>LIGHT SOCKET ASSEMBLY W10136369</p>	<p>G3391931</p>  <p>LINT DUCT SEAL WHIRLPOOL 3391931</p>
<p>G8531964</p>  <p>LINT SCREEN WHIRLPOOL 8531964 (DISCONTINUED)</p>	<p>GWPW10174745</p>  <p>MAIN CONTROL BOARD DRYER WHIRLPOOL WWPW10174745 / W10174745 / W10174745R / W10200473 / W10182366</p>	<p>GW10074270</p>  <p>MICROCOMPUTER W10074270 / W10111616 CABRIO MODEL</p>	<p>G2200376</p>  <p>MOTOR DRYER AMANA 2200376 / 948442</p>	<p>G31001589</p>  <p>MOTOR DRYER MAYTAG 31001589 / W10410996</p>
<p>GY303358</p>  <p>MOTOR DRYER MAYTAG Y303358 / 63033580-7</p>	<p>G279827</p>  <p>MOTOR DRYER WHIRLPOOL (SINGLE MODEL) 1/3 HP / 279827 / 3388235 / 2584 / 299992 / 337099 / 337100 / 3388209 / 3388234 / 339088 / 3391886 /</p>	<p>G279787</p>  <p>MOTOR DRYER WHIRLPOOL 279787</p>	<p>G3395655</p>  <p>MOTOR DRYER WHIRLPOOL 279811 / 3391087 / 3391892 / 3391898 / 3395655 / 469729 / 8535932 / 8538266 / 8539559</p>	<p>G3404470</p>  <p>MOTOR DRYER WHIRLPOOL 3404470</p>
<p>G685815</p>  <p>MOTOR DRYER WHIRLPOOL 685815 50HZ</p>	<p>G4392065</p>  <p>PULLEY DRYER KIT WHIRLPOOL 4392065</p>	<p>G6-3700340</p>  <p>PULLEY DRYER MAYTAG 33001783 / 6-3700340</p>	<p>G37001287</p>  <p>PULLEY DRYER MAYTAG 37001287 / 5-0269 / 500269 / 500269P / PS11741930 / WP37001287</p>	<p>G53-2287</p>  <p>PULLEY DRYER MAYTAG 53-2287 / 532287</p>






















Galpa Export WHIRLPOOL DRYER PARTS

<p>G12001541</p>  <p>PULLEY DRYER MAYTAG DRUM WHEEL 12001541</p>	<p>G8547174</p>  <p>PULLEY WHIRLPOOL 8547174 / 8547174V CABRIO</p>	<p>G3405281</p>  <p>RELAY DRYER WHIRLPOOL 3405281</p>	<p>G279872</p>  <p>RESISTOR KIT WHIRLPOOLTIMER DRYER 279872</p>	<p>G279441</p>  <p>RING KIT FRONT DRYER 279441 / 692526</p>
<p>G8536974</p>  <p>ROLLER SUPPORT 8536974 / W10314173</p>	<p>G697770</p>  <p>SEAL BLOWER COVER PLATE WHIRLPOOL 697770</p>	<p>GW10130493</p>  <p>SEAL DOOR W10130493 / W10239307</p>	<p>G3391906</p>  <p>SEAL DRYES WHIRLPOOL 3391906</p>	<p>G3387242</p>  <p>SEAL FRONT PANEL 3387242</p>
<p>G8576468</p>  <p>SENSOR DRYER 8576468</p>	<p>G695297</p>  <p>SOLENOID COIL VALVE DRYER WHIRLPOOL 50HZ 695297 / 307930</p>	<p>G695298</p>  <p>SOLENOID COIL VALVE DRYER WHIRLPOOL 50HZ 695298 / Y307931</p>	<p>G279834</p>  <p>SOLENOID COIL VALVE KIT. DRYER WHIRLPOOL 279834 / 12001349</p>	<p>G305605</p>  <p>SOLENOID COIL VALVE KIT. DRYER WHIRLPOOL 305605</p>
<p>G3387374</p>  <p>SPRING IDLER 3387374 / WPW10446781</p>	<p>G3405154</p>  <p>SWITCH "DRYER" "FSP" 3405154</p>	<p>G8566208</p>  <p>SWITCH "DRYER" "FSP" 8566208</p>	<p>G3405156</p>  <p>SWITCH "DRYER" CYCLE SELECTOR "FSP" 3405156</p>	<p>G3399639</p>  <p>SWITCH "DRYER" TEMPERATURE "FSP" 3399639 (4 PINS)</p>
<p>G3406105</p>  <p>SWITCH DOOR DRYER WHIRLPOOL WP3406105 / 3406104 / 3406105</p>	<p>G660936</p>  <p>SWITCH DRYER WHIRLPOOL 279173</p>	<p>GW10117655</p>  <p>SWITCH DRYER WHIRLPOOL W10117655 / WP10117655</p>	<p>G3391901</p>  <p>SWITCH LID DOOR DRYER WHIRLPOOL 3391902 / 901</p>	<p>G3406108</p>  <p>SWITCH LID DOOR DRYER WHIRLPOOL 3406108</p>
<p>G3977456</p>  <p>SWITCH PUSH TO STAR "FSP" WP3977456 / 3977456</p>	<p>G3395382</p>  <p>SWITCH PUSH TO STAR 2 TERMINAL "FSP"</p>	<p>G8543274</p>  <p>SWITCH PUSH TO STAR WHIRLPOOL 8543274</p>	<p>G3404233</p>  <p>SWITCH PUSH TO START DRYER WHIRLPOOL 3404233</p>	<p>G3398094</p>  <p>SWITCH PUSH TO START RELAY "DRYER" "FSP" 3398094 (3 PINS)</p>



Galpa Export WHIRLPOOL DRYER PARTS

<p>G3398095</p>  <p>SWITCH PUSH TO START RELAY "FSP" 3398095 (4 PINS)</p>	<p>GW10128087</p>  <p>SWITCH W10128087 (DISCONTINUED) - REFER TO MANUFACTURER LETTER FOR REPLACEMENT</p>	<p>G3405155</p>  <p>SWITCH WHIRLPOOL DRYER 3405155</p>	<p>G3403607</p>  <p>THERMAL FUSE WHIRLPOOL 3403607 / WP3403607 (MOROCHA)</p>	<p>G279816</p>  <p>THERMOSTAT DRYER FSP 279816 / 3977393</p>
<p>G279973</p>  <p>THERMOSTAT DRYER KIT FSP 279973 / 8318314 / 3391913 / 3404151 / 3404152 / 3977395 / 8318314 / 897710</p>	<p>G279769</p>  <p>THERMOSTAT DRYER KIT FSP 360/250 WHIRLPOOL 279769</p>	<p>G8577274</p>  <p>THERMOSTAT DRYER L-145C "FSP" 8577274 / WP8577274 / 8277274 / 772546 / 3976615 / 3406294 / 3390292 11.9K Ohms of resistance at 70F</p>	<p>G3387134</p>  <p>THERMOSTAT DRYER L-155-25 FSP WHIRLPOOL WP3387134 / 3387134</p>	<p>G3390291</p>  <p>THERMOSTAT DRYER L-290 FSP WHIRLPOOL 3390291</p>
<p>G3977767</p>  <p>THERMOSTAT DRYER L50-80 FSP W / EXTENSION TERMINAL WHIRLPOOL WP3977767/ 3977767 / 3399693</p>	<p>G53-1182</p>  <p>THERMOSTAT DRYER MAYTAG 53-1182 (REPLACED)</p>	<p>GLA-1053</p>  <p>THERMOSTAT DRYER MAYTAG LA-1053 / 53-1182 / LA1053</p>	<p>GY-303225</p>  <p>THERMOSTAT DRYER MAYTAG Y-303225</p>	<p>GW10169881</p>  <p>THERMOSTAT DRYER W10169881</p>
<p>G3387137</p>  <p>THERMOSTAT DRYER WHIRLPOOL 3387137 / WP3387137</p>	<p>G280010</p>  <p>THERMOSTAT DRYER WHIRLPOOL W11050897 / W10480709 / 280010 / WPW10423382 / W10423382 / 3403140</p>	<p>G8557403</p>  <p>THERMOSTAT DRYER WP8557403 / 8557403</p>	<p>G3398190</p>  <p>TIMER DRYER ASSEMBLY WHIRLPOOL 3398190/3391658</p>	<p>G3398195</p>  <p>TIMER DRYER ASSEMBLY WHIRLPOOL 3398195</p>
<p>G3976569</p>  <p>TIMER DRYER ASSEMBLY WHIRLPOOL 3976569 / 3393934</p>	<p>G8299766</p>  <p>TIMER DRYER WHIRLPOOL 8299766</p>	<p>G8299779</p>  <p>TIMER DRYER WHIRLPOOL 8299779 / WP8299779</p>	<p>GW10113761</p>  <p>TIMER DRYER WHIRLPOOL W10113761 / WPW10113761</p>	<p>GW10185988</p>  <p>TIMER DRYER WHIRLPOOL W10894766 / W10185988</p>
<p>G3979618</p>  <p>TIMER DRYER WHIRLPOOL WP3979618 / 3979618</p>	<p>GW10185970</p>  <p>TIMER DRYER WHIRLPOOL WPW10185970 / W10185970</p>	<p>GW10185982</p>  <p>TIMER DRYER WHIRLPOOL WPW10185982 / W10185982</p>	<p>GWPW10185997</p>  <p>TIMER DRYER WHIRLPOOL WPW10185997</p>	<p>G3957824</p>  <p>TIMER KNOB WHITE WHIRLPOOL W10807860 / 3957824 / 3951026 / 3957821</p>



Galpa Export WHIRLPOOL DRYER PARTS

<p>G305796</p>  <p>TIMER MAYTAG 305796 / 3-5796 / 483259 / 348320 / 296803 / 298659 / 298673 / 298688 / 299918 / 341298 / 341299 / 686644 / 687950 / 690079</p>	<p>G279737</p>  <p>TIMER WHIRLPOOL 279737</p>	<p>G3406725</p>  <p>TIMER WHIRLPOOL 3406725 DRYER</p>	<p>G3976570</p>  <p>TIMER WHIRLPOOL 3976570 / WP3976570 / 3406708 DRYER</p>	<p>G3976573</p>  <p>TIMER WHIRLPOOL 3976573 "DRYER" (DISCONTINUED)</p>
<p>G3976575</p>  <p>TIMER WHIRLPOOL 3976575</p>	<p>G3976577</p>  <p>TIMER WHIRLPOOL 3976577 / 3406703 / 3406016 DRYER</p>	<p>G3976580</p>  <p>TIMER WHIRLPOOL 3976580 DRYER</p>	<p>G3976584</p>  <p>TIMER WHIRLPOOL 3976584 DRYER</p>	<p>G8299778</p>  <p>TIMER WHIRLPOOL 8299778 "DRYER"</p>
<p>G3388107</p>  <p>TIMER WHIRLPOOL DRYER 3388107</p>	<p>G3388702</p>  <p>TIMER WHIRLPOOL DRYER 3388702</p>	<p>G3976576</p> <p>TIMER WHIRLPOOL WP3976576 / 3976576</p>	<p>G279923</p>  <p>VALVE WHIRLPOOL GAS DRYER 279923 Replaces W10622159 / W10304604 / W10500695 / 8281915 / 8281914 / 8281912 / 8281911 / 8281908 /</p>	<p>G279838</p>  <p>WHIRLPOOL HEATER ELEMENT 279838 / 3403585</p>
<p>G1840.402</p>  <p>WHIRLPOOL PULLEY WP691366 / 691366</p>	<p>G697694</p>  <p>WHIRLPOOL REAR DRUM SEAL 697694 / 280114</p>	<p>G3406107</p>  <p>WHIRLPOOL SWITCH LID DOOR DRYER 3406107 / WP3406107</p>		