 
 

























































Galpa Export Danfoss Domestic Refrigeration

<p>G117U1022</p>  <p>Cover Danfoss 117u1022</p>	<p>G1177118</p>  <p>Danfoss Capacitor 15Mfd 250vac 117-7118</p>	<p>G117U5022</p>  <p>Danfoss Capacitor Nf7clx 110v 60hz 117u5022 288-352 Mf 125v</p>	<p>G117G5023</p>  <p>Danfoss Capacitor Sc10clx 110v 60hz 117u5023</p>	<p>G117U5023</p>  <p>Danfoss Capacitor Sc10clx 110v 60hz 117u5023 216-264 Mf 125v</p>
<p>G117U5017</p>  <p>Danfoss Capacitor Sc10clx 220v 117u5017</p>	<p>G117U5025</p>  <p>Danfoss Capacitor T14clx 110v 60hz 117u5025 252-308 Mf 125v</p>	<p>G1177441</p>  <p>Danfoss Starting Relay 115V/60Hz 117-7441 117U6007</p>	<p>G2204.0025</p>  <p>Danfoss Thermostat 077b0025 -32 To -15</p>	<p>G2204.7005</p>  <p>Danfoss Thermostat 077b7005 Celcius WCI -7.8 WCO -15.0 CCI -21.0 CCO -32.5 Capillary 2300mm</p>
<p>G2204.274</p>  <p>Danfoss Thermostat 077b7274 / 077b6039 -10.5c To -4.5</p>	<p>G2204.100</p>  <p>Danfoss Thermostat 1 Door Refrigerators 077b7100 -18 To +3 Fit: K50P-1125-001</p>	<p>G2204.104</p>  <p>Danfoss Thermostat 2 Doors Refrigerator 077b7104 -23 To -12.5</p>	<p>G2204.7001</p>  <p>Danfoss Thermostat Bottle Coolers 077b7001</p>	<p>G2204.7008</p>  <p>Danfoss Thermostat Bottle Coolers 077b7008</p>
<p>G2204.7101</p>  <p>Danfoss Thermostat Bottle Coolers 077b7101 +34.7F To +49.1F</p>	<p>G2204.102</p>  <p>Danfoss Thermostat Freezer 077b7102 -24.5 To -15</p>	<p>G2204.7194</p>  <p>Danfoss Thermostat Push Button 077b7194</p>	<p>G2204.105</p>  <p>Danfoss Thermostat Ref. 1 Door 077B7105 -18 To +3</p>	<p>G077Z7011</p>  <p>Danfoss Thermostat Refrigerators 077Z7011 17 To 41 84 in capillary tub Fit: A12-700 A12-701 A12-1560 A12-72 077B6856 True</p>
<p>G5710058P01</p>  <p>Kit Danfoss 5710058p01 Maneurope</p>	<p>G5710058P02</p>  <p>Kit Danfoss 5710058p02 Maneurope</p>	<p>G5710058P04</p>  <p>Kit Danfoss 5710058p04 Maneurope</p>	<p>G5710058P05</p>  <p>Kit Danfoss 5710058p05 Maneurope</p>	<p>G8156001</p>  <p>Kit Danfoss 8156001 Maneurope</p>
<p>G8156138</p>  <p>Kit Danfoss 8156138 Scroll</p>	<p>G117U3301</p>  <p>Overload Protector Danfoss 115v 117u3301</p>	<p>G2008.12-1</p>  <p>Relay Combined Danfoss 1/2hp 115v 117u6020</p>	<p>G2008.12-2</p>  <p>Relay Combined Danfoss 1/2hp 220v 117u6019</p>	<p>G2008.13-1</p>  <p>Relay Combined Danfoss 1/3hp 115v 117u4129</p>



Galpa Export Danfoss Domestic Refrigeration

<p>G2008.13-2</p>  <p>Relay Combined Danfoss 1/3hp 220v 117u4149 / 117u4139 (Discontinued)</p>	<p>G2008.14-4</p>  <p>Relay Combined Danfoss 1/4hp 110v 117u4061</p>	<p>G2008.14-2</p>  <p>Relay Combined Danfoss 1/4hp 220v 117u4140</p>	<p>G2008.15-1</p>  <p>Relay Combined Danfoss 1/5hp 115v 117u4127</p>	<p>G2008.15-2</p>  <p>Relay Combined Danfoss 1/5hp 220v 117u6000</p>
<p>G2008.16-1</p>  <p>Relay Combined Danfoss 1/6hp 115v 117u4113</p>	<p>G2008.16-2</p>  <p>Relay Combined Danfoss 1/6hp 115v 117u4126</p>	<p>G2008.13-3</p>  <p>Relay Combined Danfoss 117u4142</p>	<p>G117U4060</p>  <p>Relay Combined FF FF8.5B Danfoss 117u4060</p>	<p>G2008.14-3</p>  <p>Relay Danfoss 1/4hp 220v 117u6016</p>
<p>G117U6003</p>  <p>Relay Danfoss 117u6003</p>	<p>G119-5616</p>  <p>Relay Danfoss 119-5616 / 8173024 502v/60hz 35amp</p>	<p>G117U6007</p>  <p>Relay Danfoss 220v 117u6007</p>	<p>G8173022</p>  <p>Relay Danfoss 8173022 Rva6amkl 1ph Compressors</p>	<p>G2008.12-4</p>  <p>Relay Danfoss Sc10clx 220v 117u6005</p>
<p>G2008.12-3</p>  <p>Relay Danfoss Sc12ftx 115v 117u6012</p>	<p>G117U6106</p>  <p>Relay Ptc Danfoss 115v 117u6106</p>	<p>G119-5618</p>  <p>Run Capacitor Danfoss 119-5618</p>	<p>G119-5620</p>  <p>Run Capacitor Danfoss 119-5620</p>	<p>G117U5018</p>  <p>Start Capacitor Danfoss 117u5018</p>
<p>G119-4654</p>  <p>Start Capacitor Danfoss 119-4654</p>	<p>G119-5635</p>  <p>Start Capacitor Danfoss 119-5635</p>	<p>G119-5636</p>  <p>Start Capacitor Danfoss 119-5636</p>	<p>G117U4061</p>  <p>Start Relay NL/FF 115V/60Hz 117U4061 117U2101</p>	<p>G1198453A</p>  <p>STARTING RELAY 495V/60Hz 35AMP Danfoss 119-8453A</p>