



Galpa Export Whirlpool Range, Stove, Oven Parts

<p>G2002.W20</p>  <p>2002.W20</p>	<p>G2002.W53</p>  <p>2002.W53</p>	<p>G4451231</p>  <p>4451231</p>	<p>G865940</p>  <p>Bake Element Whirlpool 865940</p>	<p>G9760766</p>  <p>Bake Element Whirlpool WPW10207397 W10207397 9760766 Wpw10207397 4448696 4452153 9760766</p>
<p>G4338568</p>  <p>Base Drip Pan Whirlpool "Fsp" 4338568 / Wb32x102</p>	<p>GW10196406</p>  <p>Bowl Chrome 6in With Hole Whirlpool Wpw10196406 3195208</p>	<p>GW10196405</p>  <p>Bowl Chrome 8" With Hole Whirlpool Wpw10196405 / 3195209</p>	<p>GW10290353</p>  <p>Bowl Porcelain 6" With Hole Whirlpool W10290353 / Wpw10290353</p>	<p>GW10290350</p>  <p>Bowl Porcelain 8" With Hole Whirlpool W10290350 / Wpw10290350</p>
<p>G98005518</p>  <p>Burner Cap Whirlpool 98005518</p>	<p>G98005519</p>  <p>Burner Cap Whirlpool 98005519</p>	<p>G98017462</p>  <p>Burner Cap Whirlpool 98017462</p>	<p>G3191904</p>  <p>Burner Cap Whirlpool Front 3191904</p>	<p>G3191901</p>  <p>Burner Cap Whirlpool Rear 3191901</p>
<p>GW10183368</p>  <p>Burner Cap Whirlpool Rear W10183368</p>	<p>GW10183369</p>  <p>Burner Cap Whirlpool Rear W10183369</p>	<p>GW10183370</p>  <p>Burner Cap Whirlpool Rear W10183370</p>	<p>GW10118216</p>  <p>Burner Cap Whirlpool W10118216</p>	<p>G12001074</p>  <p>Burner Maytag 12001074</p>
<p>G12001075</p>  <p>Burner Maytag 12001075 / 7507p136-60 / 7507p134-60 / 5187d03160 / 5187d02760 / 5187m027-60 / 7507p136-60 / 7507p135-60 / 7507p134-60 /</p>	<p>G3186478</p>  <p>Burner Whirlpool 3186478</p>	<p>G98004410</p>  <p>Burner Whirlpool 3in 98004410 / Wp98004410 / 98003939</p>	<p>G98003940</p>  <p>Burner Whirlpool 4.25in 98003940 TQU0100060</p>	<p>G74003963</p>  <p>Burner Whirlpool 74003963 / 3412d024-09/ 12500050 / Wp3412d024-09</p>
<p>G74010149</p>  <p>Burner Whirlpool 74010149 / Wp74010149</p>	<p>G8053360</p>  <p>Burner Whirlpool 8053360</p>	<p>G8053463</p>  <p>Burner Whirlpool 8053463 (Discontinued)</p>	<p>G8053466</p>  <p>Burner Whirlpool 8053466</p>	<p>G8053468</p>  <p>Burner Whirlpool 8053468</p>



Galpa Export Whirlpool Range, Stove, Oven Parts

<p>G98003939</p>  <p>Burner Whirlpool 98003939 / Wp98003939 (Discontinued)</p>	<p>G98015950</p>  <p>Burner Whirlpool 98015950</p>	<p>G74003965</p>  <p>Burner Whirlpool Grey 74003965 / 3412d024-26</p>	<p>GW10125641</p>  <p>Burner Whirlpool W10125641 / 7504p00160k</p>	<p>GW10132045</p>  <p>Burner Whirlpool W10132045</p>
<p>GW10132046</p>  <p>Burner Whirlpool W10132046 / W10116248 / W10243402 / 98017538</p>	<p>GW10270804</p>  <p>Burner Whirlpool W10270804</p>	<p>G74003332</p>  <p>Burner Whirlpool Wp74003332 / 74003332 / 74002392</p>	<p>G74010148</p>  <p>Burner Whirlpool Wp74010148 / 74010148</p>	<p>G8053465</p>  <p>Burner Whirlpool Wp8053465 / 8053465 / 3196616 / 8272971</p>
<p>G98016327</p>  <p>Burner Whirlpool 98016327</p>	<p>G98015032</p>  <p>Clip Electrode Whirlpool 98015032</p>	<p>G12001393</p>  <p>Cook Top Whirlpool 12001393</p>	<p>G3187940</p>  <p>Door Handle 3187940 / Wp3187940</p>	<p>G8534853</p>  <p>Door Hinge Whirlpool 8534853</p>
<p>GW10155557</p>  <p>Door Oven Kitchenaid W10155557</p>	<p>GWP8053334</p>  <p>Drawer Glide Stove Whirlpool Wp8053334 / 8053334 / 3195062</p>	<p>GWPW10114344</p>  <p>Drawer Glide Stove Whirlpool Wpw10114344</p>	<p>G883151</p>  <p>Filter Par Range Hood Whirlpool (Set Of 3) 883151 / Wp883151</p>	<p>G883151OB</p> <p>Filter Par Range Hood Whirlpool (Set Of 3) 883151 / Wp883151 (Open Box)</p>
<p>G4396388</p>  <p>Filter Par Range Hood Whirlpool 4396388 / Wp4396388</p>	<p>G31001485</p>  <p>Gas Burner Maytag 31001485</p>	<p>GW10135245</p>  <p>Gas Dryer Conversion Kit Gas To Lp W10135245 / W10402145 / 209072 / 2118502 / 239072 / 279911 / 3-8378 / 308378 / 33002926 / 687349 /</p>	<p>G8281918</p>  <p>Gas Valve Assembly Whirlpool 8281918</p>	<p>G9761557CB</p>  <p>Griddle Kitchenaid 9761557cb</p>
<p>G8053895</p>  <p>Griddle Whirlpool 8053895 / 8053455 / Wp8053455</p>	<p>G8053896</p>  <p>Griddle Whirlpool 8053896 / 8053456 / Wp8053456</p>	<p>G5303271409</p> <p>Heater Defrost Frigidaire 5303271409 (Discontinued)</p>	<p>G98010972</p>  <p>Hose Connector Whirlpool 98010972</p>	<p>G3148948</p>  <p>Infinite Switch Whirlpool W10900107 / 4391989 / 74011409 / Wp74011409 / 14200008 / 14201948 / 14201949 / 14205061 / 14205290 / 14205479 /</p>





Galpa Export Whirlpool Range, Stove, Oven Parts

<p>G3191922</p>  <p>Knob Control Black Whirlpool WP319192 / 3191922</p>	<p>GW10160375</p>  <p>Knob Kitchenaid W10160375</p>	<p>G3183112</p>  <p>Knob Oven Selector Whirlpool 3183112 / WP3183112</p>	<p>G8273108</p>  <p>Knob Whirlpool 8273108</p>	<p>G98016471B</p> <p>Knob Whirlpool 98016471b (Discontinued)</p>
<p>G98016471S</p>  <p>Knob Whirlpool 98016471s</p>	<p>GW10058970</p>  <p>Knob Whirlpool W10058970</p>	<p>GW10118492</p>  <p>Knob Whirlpool W10118492</p>	<p>GW10198947</p>  <p>Knob Whirlpool W10198947</p>	<p>GW10198948</p>  <p>Knob Whirlpool W10198948</p>
<p>GW10198950</p>  <p>Knob Whirlpool W10198950</p>	<p>GW10198951</p>  <p>Knob Whirlpool W10198951</p>	<p>GW10198952</p>  <p>Knob Whirlpool W10198952</p>	<p>GW10198953</p>  <p>Knob Whirlpool W10198953</p>	<p>GWPW10591270</p>  <p>Lp Conversion Kit Whirlpool Wpw10591270</p>
<p>GW10273059</p>  <p>Lpg Conversion Kit Whirlpool W10273059</p>	<p>G8184719</p>  <p>Microcomputer 8184719 (Obsolete)</p>	<p>G4452240</p>  <p>Microcomputer Whirlpool 4452240 (Discontinued)</p>	<p>GW10312205</p>  <p>Microcomputer Whirlpool W10312205</p>	<p>GW10308477</p>  <p>Oven Bake Element Whirlpool W10308477 / Wpw10308477</p>
<p>G316557115</p>  <p>Oven Control Board 316557115</p>	<p>G4451991</p>  <p>Oven Control Board 4451991 / 8302967 / Wp8302967</p>	<p>G8300795</p>  <p>Oven Control Board 8300795</p>	<p>G8302994</p>  <p>Oven Control Board 8302994 / Wp8302994</p>	<p>G6610309</p>  <p>Oven Control Board Microcomputer Whirlpool 6610309 / Wp6610457</p>
<p>G8303885</p>  <p>Oven Control Board Whirlpool 8303885 / 8303505 / Wpw10340935</p>	<p>GWPW10424330</p>  <p>Oven Control Board Whirlpool Wpw10424330</p>	<p>G814412</p>  <p>Oven Safety Valve Whirlpool 814412</p>	<p>G9761959</p>  <p>Oven Safety Valve Whirlpool 9761959 / Wpw10293048</p>	<p>G98011275</p>  <p>Oven Safety Valve Whirlpool. Mili-Voltios 98014016 / 98011275</p>




Galpa Export Whirlpool Range, Stove, Oven Parts

<p>G12001676</p>  <p>Porcelain Receptacle Maytag 12001676</p>	<p>G3195008</p>  <p>Range Gas Valve Whirlpool W / Regulator Assembly 3195008</p>	<p>G660532</p>  <p>Range Heater Element 4t 6" 240v Whirlpool 660532 / Wp660532</p>	<p>G660533</p>  <p>Range Heater Element 5t 8" 240v Whirlpool 660533 / Wp660533</p>	<p>GW10259865</p>  <p>Range Heater Element 5t 8" 240v Whirlpool W10259865 / 9761345 / Wpw10259865</p>
<p>G12002142</p>  <p>Range Heater Element Whirlpool 12002142 Surface Top Wp8523694</p>	<p>GWP8273994</p>  <p>Range Heater Element Whirlpool 1200w WP8273994 8273994</p>	<p>G3189895</p>  <p>Range Heater Element Whirlpool 1700w 3189895 / 8185644 / 8203568 / Wp8203568 3169544 / 8203531 / 9751529</p>	<p>G8523696</p>  <p>Range Heater Element Whirlpool 1800 Watts 8523696 / W10823698</p>	<p>G8286187</p>  <p>Range Heater Element Whirlpool 8286187 / Wp8286187</p>
<p>G3189894</p>  <p>Range Heater Element Whirlpool W10212682 / 1472249 / 3169543 / 3189894 / 8185646 / Ah2342231 / Ea2342231 / Ps2342231 / B002zma0tq /</p>	<p>G3189897</p>  <p>Range Heater Element Whirlpool Wp8185641 / 8185641 / 3169546 / 3189897</p>	<p>G3189896</p>  <p>Range Heater Element Whirlpool Wp8185643 / 8185643 / 3169545 / 3189896 / 8185639 / 9750754 / 9752183 / 9753663 / 9753664</p>	<p>G8523047</p>  <p>Range Heater Element Whirlpool Wp8523047</p>	<p>GWPW10242957</p>  <p>Range Heater Element Whirlpool Wpw10242957 / W10242957 / 8523695 / 8272568 / 8053622 / 4389679 / 4343210 / 4343098</p>
<p>G3183120</p>  <p>Range Knob Black 3183120 (Discontinued)</p>	<p>G3196231</p>  <p>Range Knob Black 3196231</p>	<p>G3150371</p>  <p>Range Knob Black Whirlpool 3150371</p>	<p>G3150373</p>  <p>Range Knob Black Whirlpool 3150373</p>	<p>G3150374</p>  <p>Range Knob Black Whirlpool 3150374</p>
<p>G8273103</p>  <p>Range Knob Black Whirlpool 8273103</p>	<p>G3196233</p>  <p>Range Knob Cream 3196233</p>	<p>G3196232</p>  <p>Range Knob White 3196232 / WP3196232</p>	<p>G3150372</p>  <p>Range Knob White Whirlpool 3150372</p>	<p>G8273104</p>  <p>Range Knob White Whirlpool 8273104</p>
<p>G3183119</p>  <p>Range Knob White Whirlpool WP3183119</p>	<p>G4454536</p>  <p>Range Switch Whirlpool 1700w/2100w 4454536</p>	<p>G4454537</p>  <p>Range Switch Whirlpool 2400w 4454537 (Discontinued)</p>	<p>G3148949</p>  <p>Range Switch Whirlpool 3148949</p>	<p>G3148950</p>  <p>Range Switch Whirlpool 3148950</p>





Galpa Export Whirlpool Range, Stove, Oven Parts

<p>G4454535</p>  <p>Range Switch Whirlpool 454535 (Discontinued)</p>	<p>G8203534</p>  <p>Range Switch Whirlpool 8203534</p>	<p>G9750589</p>  <p>Range Switch Whirlpool 9750589</p>	<p>G3148953</p>  <p>Range Switch Whirlpool WP3148953 / 3149400</p>	<p>GWP3149399</p> <p>Range Switch Whirlpool WP3149399 3149399 308453 308455 308456 310178 311301 311302 311833 311835 311848 311850 314139</p>
<p>GWP3149401</p> <p>Range Switch Whirlpool WP3149401 3149401 3-8454 308452 308454 308457 309204 309206 310177 311207 311209 311300 311834 311843 311845</p>	<p>G3149404</p>  <p>Range Switch Whirlpool WP3149404 / 3149404 / 3148951 / 310179 / 311847 / 311856 / 311857 / 314144 / W10295576</p>	<p>GWP7403P238-60</p>  <p>Range Switch Whirlpool Wp7403p238-60 / 7403p238-60 / 7403p37360 / 7403p26260 / 7403p23860 / 7403p373-60 / 7403p262-60</p>	<p>G4450249</p>  <p>Range Thermostat Whirlpool 4450249</p>	<p>G4451442</p>  <p>Range Thermostat Whirlpool WP9759243 / 4451442 / 9759243</p>
<p>GW11122560</p> <p>Range/ Control Board Microcomputer Whirlpool W11122560 Replaces W10424883 W11032182 W10734613 W10834014 W10887898 WPW10734613</p>	<p>G8053344</p>  <p>Sensor Oven Temperature WP8053344 8053344 3148440 3196564 3196966 334300 4337170 4349619 4389458 4389626 4389882 4389906 54-007 814333 98005841</p>	<p>G98016567B</p>  <p>Skirt Knob Whirlpool 98016567B</p>	<p>G98016567S</p>  <p>Skirt Knob Whirlpool 98016567S</p>	<p>G3150505</p>  <p>Socket Light Oven Whirlpool 3150505 W11281687 WPW10454648 W10454648 W10565174 3176512 3196701 880009 880012 9750925 9781050</p>
<p>GW10127480</p>  <p>Spark Electrode Whirlpool W10127480 / W11051129</p>	<p>GW10127479</p>  <p>Spark Electrode Whirlpool Wpw10209656 / W10209656 / 98008959 / 98012193 / 98014514 / 98014515 / 98017561 / 98017562 / 98017917 / Ps11730430 /</p>	<p>G4456901</p>  <p>Spark Ignition Switch Wp4456901</p>	<p>G98003951</p>  <p>Spark Module 6 Position Whirlpool 98003951 / W10110489 / Wpw10110486 / 3190700 / 8522424 / 8522427 / Ig120j-6 (Without Ground Terminal)</p>	<p>G98015210</p>  <p>Spark Module 8 Position Whirlpool 98015210 / 98004303 / W10422763</p>
<p>G98006390</p>  <p>Spring Knob Whirlpool 98006390</p>	<p>G4451934</p>  <p>Supressor Whirlpool4451934 / Wp4451934</p>	<p>G9763765</p>  <p>Switch Range Whirlpool 9763765 / Wp9763765</p>	<p>G4451665</p>  <p>Thermocuplon Oven Whirlpool WP4451665 4451665 4450026</p>	<p>GW10434452</p> <p>Whirlpool Dual Surface Element Switch W10434452</p>
<p>GW10278150</p>  <p>Whirlpool Mounting Clip for Spark Electrode WPW10278150 W10278150 98015032</p>	<p>G12400035</p>  <p>Whirlpool Oven Igniter 12400035</p>	<p>G4342528</p>  <p>Whirlpool Oven Igniter 4342528</p>	<p>G98005652</p>  <p>Whirlpool Oven Igniter W10918546 / 98005652</p>	<p>G3186491</p>  <p>Whirlpool Oven Igniter Wp31001556</p>



Galpa Export Whirlpool Range, Stove, Oven Parts

G98008959  Whirlpool Oven Ignitor W10209656 / 98008959 / 98014514	G330031  Whirlpool Terminal Block 330031	GW10206288 Whirlpool W10206288 Valve Burner	GW10284885 Whirlpool W10284885 Control Knob	GWPW10110491 Whirlpool WPW10110491 Module
---	---	--	--	--