






















Galpa Export Danfoss Pressure Transmitters

<p>G061F8333</p> <p>Danfoss Cartridge Pressure Switch 1/4 in. Flare Female 2UA305W I/20 061F8333</p>	<p>G061F7526</p> <p>Danfoss Cartridge Pressure Switch 1/4 in. Flare Female 2UA526W I/20 061F7526</p>	<p>G061F7517</p> <p>Danfoss Cartridge Pressure Switch 1/4 in. Flare Female 2UB517W I/20 061F7517</p>	<p>G060G146566</p>  <p>Danfoss Compact Pressure Transmitter For Marine Applications Mbs3100</p>	<p>G060G4413</p>  <p>Danfoss Compact Pressure Transmitter Mbs3153 060g4413</p>
<p>G060G3877</p>  <p>Danfoss Compact Pressure Transmitter Mbs3153, 060g3877</p>	<p>G060G4411</p>  <p>Danfoss Compact Pressure Transmitter Mbs3153, 060g4411</p>	<p>G060G4412</p>  <p>Danfoss Compact Pressure Transmitter Mbs3153, 060g4412</p>	<p>G060G1034</p>  <p>Danfoss Connector With Cable 16 Ft, Connection Din43650-A, For Aks/Mbs 060g1034</p>	<p>G060G1037</p> <p>Danfoss Pressure Sensor Ak-Cc, 1/4npt, -14.5 To 174 Psig 060g1037</p>
<p>G060G1112</p> <p>Danfoss Pressure Transmitter 060G1112</p>	<p>G060G2117</p> <p>Danfoss Pressure Transmitter Aks 33 1/4 Npt, -1-12bar 060g2117</p>	<p>G060G2101</p>  <p>Danfoss Pressure Transmitter Aks33 -1-16bar, 1/4 Npt Plug. 060g2101</p>	<p>G060G1133</p>  <p>Danfoss Pressure Transmitter Mbs 3000-2211-A1ab04-0 060g1133</p>	<p>G060G1475</p> <p>Danfoss Pressure Transmitter Mbs-3150-2011-6Bb04 0-10 bar 060g1475</p>
<p>G060G1125</p> <p>Danfoss Pressure Transmitter Mbs3000 0-10bar, 1/4" Npt Plug 060g1125 Mbs 3000-2011-A1ab04-0</p>	<p>G060G1136</p>  <p>Danfoss Pressure Transmitter Mbs3000 0-10bar, 1/4" Npt Plug 060g1136</p>	<p>G060G1142</p>  <p>Danfoss Pressure Transmitter Mbs3000 0-150psi S, 1/4" Npt Plug, 4-20ma, 060g1142</p>	<p>G060G1137</p>  <p>Danfoss Pressure Transmitter Mbs3000 0-16bar, 1/4" Npt Plug 060g1137</p>	<p>G060G1563</p>  <p>Danfoss Pressure Transmitter Mbs3000 0-1bar, 1/4" Npt Plug, 4-20ma, 060g1563, Operating Temp -40 To 85 C</p>
<p>G060G1143</p>  <p>Danfoss Pressure Transmitter Mbs3000 0-200psi S, 1/4" Npt Plug, 4-20ma, 060g1317</p>	<p>G060G1430</p>  <p>Danfoss Pressure Transmitter Mbs3000 0-25bar, 1/4" G Plug</p>	<p>G060G1144</p>  <p>Danfoss Pressure Transmitter Mbs3000 0-300psi S, 1/4" Npt Plug, 4-20ma, 060g1144</p>	<p>G060G1123</p>  <p>Danfoss Pressure Transmitter Mbs3000 0-4bar, 1/4" Npt Plug 060g1123</p>	<p>G060G3946</p>  <p>Danfoss Pressure Transmitter Mbs3000 0-600bar, 1/4" Npt Plug</p>
<p>G060G1140</p>  <p>Danfoss Pressure Transmitter Mbs3000 0-60psi, 1/4" Npt Plug</p>	<p>G060G1135</p>  <p>Danfoss Pressure Transmitter Mbs3000 0-6bar, 1/4" Npt Plug</p>	<p>G060G1711</p> <p>Danfoss Pressure Transmitter, 0-200 Psia 4-20 Ma, Type: Aks 33, Pressure Connection Size: 1/4-18, Pressure Connection Type: Npt,</p>	<p>G060G3945</p> <p>Danfoss Pressure transmitter, Type: MBS 3000, Pressure connection size: 1/4-18, Pressure connection type: NPT, Electrical connection</p>	