



# Galpa Export Danfoss Pressure Switch

<p><b>G060N1036</b></p>  <p>Danfoss Block Type Pressure Transmitter Mbs 5100 060n1036</p>	<p><b>G060N1035</b></p>  <p>Danfoss Block Type Pressure Transmitter Mbs 5100 1/4 G 060n1035</p>	<p><b>G060N1066</b></p>  <p>Danfoss Block Type Pressure Transmitter Mbs 5150 060n1066</p>	<p><b>G061B010266</b></p>  <p>Danfoss Compact Pressure Switch Mbc5100</p>	<p><b>G061B012866</b></p>  <p>Danfoss Compact Pressure Switch Mbc5100</p>
<p><b>G061B300466</b></p>  <p>Danfoss Compact Pressure Switch Mbc5100 (2431-1db04)</p>	<p><b>G061B100566</b></p>  <p>Danfoss Compact Pressure Switch Mbc5100 5-40 Bar, G1/4</p>	<p><b>G061B510166</b></p>  <p>Danfoss Compact Pressure Switch Mbc5100 600 Bar</p>	<p><b>G060N1072</b></p>  <p>Danfoss Compact Pressure Transmitter Mbc 5150-2011-2db04, 0-10bar, G 1/4 Female, 060n1072</p>	<p><b>G060B017166</b></p>  <p>Danfoss Differential Pressure Control Mp55a, Conn 1/4", Adjustable Differential, Low Differential Pressure</p>
<p><b>G017D002166</b></p>  <p>Danfoss Differential Pressure Switch 0.5-4 Bar Rt260a 017d002166</p>	<p><b>G060-315066</b></p>  <p>Danfoss Differential Pressure Switch Cas133</p>	<p><b>G060-313066</b></p>  <p>Danfoss Differential Pressure Switch Cas155</p>	<p><b>G061B128966</b></p>  <p>Danfoss Differential Pressure Switch Mbc 5180-2031-3db04</p>	<p><b>G061B128066</b></p>  <p>Danfoss Differential Pressure Switch Mbc180</p>
<p><b>G017D004866</b></p>  <p>Danfoss Differential Pressure Switch Rt260al</p>	<p><b>G060-214666</b></p>  <p>Danfoss Pressure Switch Kp37 060-214666</p>	<p><b>G060-500266</b></p>  <p>Danfoss Pressure Switch Kpi35</p>	<p><b>G060-121766</b></p>  <p>Danfoss Pressure Switch Kpi35 M/36 060-121766</p>	<p><b>G060-500366</b></p>  <p>Danfoss Pressure Switch Kpi36</p>
<p><b>G060-310466</b></p>  <p>Danfoss Pressure Switch Kps33</p>	<p><b>G060-310366</b></p>  <p>Danfoss Pressure Switch Kps33 060-310366 Dif 0.2 Bar, G 3/8 A</p>	<p><b>G060-310066</b></p>  <p>Danfoss Pressure Switch Kps35</p>	<p><b>G060-310566</b></p>  <p>Danfoss Pressure Switch Kps35 (0 To 8bar) Diff. 0.4to1.5bar Max. Press. 12bar 060-310566</p>	<p><b>G060-310266</b></p>  <p>Danfoss Pressure Switch Kps39</p>
<p><b>G060-312166</b></p>  <p>Danfoss Pressure Switch Kps45</p>	<p><b>G061B7003</b></p>  <p>Danfoss Pressure Valve Block Mbv5000</p>	<p><b>G061B7000</b></p>  <p>Danfoss Pressure Valve Block Mbv5000 061B7000</p>	<p><b>G061B7016</b></p>  <p>Danfoss Pressure Valve Block Mbv5000 1/4"</p>	<p><b>G061B7001</b></p>  <p>Danfoss Test Valve Block Mbv5000 061b7001</p>



# Galpa Export Danfoss Pressure Switch

<b>G060L313066</b>  Danfoss Thermostat KPS 80 060L313066 Reset function: Auto, Contact function: SPDT gold, Cap. tube length 196 7/8 in, Sensor type: Remote bulb	<b>G060-333666</b>  Nipple And Reducer For Rt An Mp	<b>G017-524566</b>  Pressure Control Danfoss Rt1	<b>G017-519166</b>  Pressure Control Danfoss Rt112	<b>G1818.RT116</b>  Pressure Control Danfoss Rt116 1,00 - 10,00 Bar Spdt Reset Max 017-520466
<b>G017-520366</b>  Pressure Control Danfoss Rt116 Spdt 1,00 - 10,00 Bar Spdt Reset Max 017-520366	<b>G017-523766</b>  Pressure Control Danfoss Rt200	<b>G031E021566</b>  Pressure Switch Danfoss For Air And Water Cs 2 To 6 Bar	<b>G031E020066</b>  Pressure Switch Danfoss For Air And Water G 1/4" Female Ip43	<b>G031E022066</b>  Pressure Switch Danfoss For Air And Water G 1/4" Female Ip43