





























# Galpa Export Danfoss Contactors

|  |  |  |  |  |
|--|--|--|--|--|
| <b>G037H0112</b><br><br>Danfoss Auxiliary Contact<br>Cb-Nc For Contactor 10a<br>Normal Closed | <b>G037H0111</b><br><br>Danfoss Auxiliary Contact<br>Cb-No For Contactor 10a<br>Normal Open                       | <b>G037H6487</b><br><br>Danfoss Contactor Coil<br>110v 50-60hz For Dp25,<br>Dp30 And Dp40                             | <b>G037G6087</b><br><br>Danfoss Contactor Coil<br>110v 50-60hz For Dp50 | <b>G037H6087</b><br><br>Danfoss Contactor Coil<br>110v 50-60hz For Dp50                   |
| <b>G037H6488</b><br><br>Danfoss Contactor Coil<br>220v 50-60hz For Dp25,<br>Dp30 And Dp40     | <b>G037H6088</b><br><br>Danfoss Contactor Coil<br>220v 50-60hz For Dp50   | <b>G037H6484</b><br><br>Danfoss Contactor Coil<br>24v 50-60hz For Dp25,<br>Dp30 And Dp40                              | <b>G037H6084</b><br><br>Danfoss Contactor Coil<br>24v 50-60hz For Dp50  | <b>G037H6478</b><br><br>Danfoss Contactor Coil<br>440v 50-60hz For Dp25,<br>Dp30 And Dp40 |
| <b>G037H6078</b><br><br>Danfoss Contactor Coil<br>440v 50-60hz For Dp50                       | <b>G047B010266</b><br><br>Danfoss Contactor Cover +<br>Block, Bci-2, Ip-55, For<br>Ci6 / 30 And Dp-25 To<br>Dp-40 | <b>G047B011166</b><br><br>Danfoss Contactor Cover<br>Push Button, Bci-2,<br>Ip-55, For Ci6 / 30 And<br>Dp-25 To Dp-40 | <b>G037H415123</b><br><br>Danfoss Contactor Dp25 2<br>Poles 110v 25a     | <b>G037H415132</b><br><br>Danfoss Contactor Dp25 2<br>Poles 220v 25a                      |
| <b>G037H415113</b><br><br>Danfoss Contactor Dp25 2<br>Poles 24v 25a                         | <b>G037H415023</b><br><br>Danfoss Contactor Dp25 3<br>Poles 110v 25a  | <b>G037H415032</b><br><br>Danfoss Contactor Dp25 3<br>Poles 220v 25a  | <b>G037H415013</b><br><br>Danfoss Contactor Dp25 3<br>Poles 24v 25a    | <b>G037H415223</b><br><br>Danfoss Contactor Dp30 2<br>Poles 110v 30a                    |
| <b>G037H415232</b><br><br>Danfoss Contactor Dp30 2<br>Poles 220v 30a                        | <b>G037H415213</b><br><br>Danfoss Contactor Dp30 2<br>Poles 24v 30a   | <b>G037H415423</b><br><br>Danfoss Contactor Dp30 3<br>Poles 110v 30a  | <b>G037H415432</b><br><br>Danfoss Contactor Dp30 3<br>Poles 220v 30a   | <b>G037H415413</b><br><br>Danfoss Contactor Dp30 3<br>Poles 24v 30a                     |
| <b>G037H415723</b><br><br>Danfoss Contactor Dp40 2<br>Poles 110v 40a                        | <b>G037H415732</b><br><br>Danfoss Contactor Dp40 2<br>Poles 220v 40a  | <b>G037H415713</b><br><br>Danfoss Contactor Dp40 2<br>Poles 24v 40a   | <b>G037H415623</b><br><br>Danfoss Contactor Dp40 3<br>Poles 110v 40a   | <b>G037H415632</b><br><br>Danfoss Contactor Dp40 3<br>Poles 220v 40a                    |



## Galpa Export Danfoss Contactors

**G037H415613**



Danfoss Contactor Dp40 3  
Poles 24v 40a

**G037H415923**



Danfoss Contactor Dp50 3  
Poles 110v 50a

**G037H415932**



Danfoss Contactor Dp50 3  
Poles 220v 50a

**G037H415913**



Danfoss Contactor Dp50 3  
Poles 24v 50a