



Galpa Export Danfoss Overload Relays

G047H0200  Danfoss Overload Relay Ti16c 0.13-0.20a For Dp25, Dp30 And Dp40	G047H0201  Danfoss Overload Relay Ti16c 0.19-0.29a For Dp25, Dp30 And Dp40	G047H0202  Danfoss Overload Relay Ti16c 0.27-0.42a For Dp25, Dp30 And Dp40	G047H0203  Danfoss Overload Relay Ti16c 0.40-0.62a For Dp25, Dp30 And Dp40	G047H0204  Danfoss Overload Relay Ti16c 0.60-0.92a For Dp25, Dp30 And Dp40
G047H0205  Danfoss Overload Relay Ti16c 0.85-1.30a For Dp25, Dp30 And Dp40	G047H0206  Danfoss Overload Relay Ti16c 1.20-1.90a For Dp25, Dp30 And Dp40	G047H0207  Danfoss Overload Relay Ti16c 1.80-2.80a For Dp25, Dp30 And Dp40	G047H0212  Danfoss Overload Relay Ti16c 11.00-16.00a For Dp25, Dp30 And Dp40	G047H0208  Danfoss Overload Relay Ti16c 2.70-4.20a For Dp25, Dp30 And Dp40
G047H0209  Danfoss Overload Relay Ti16c 4.00-6.20a For Dp25, Dp30 And Dp40	G047H0210  Danfoss Overload Relay Ti16c 6.00-9.20a For Dp25, Dp30 And Dp40	G047H0211  Danfoss Overload Relay Ti16c 8.00-12.00a For Dp25, Dp30 And Dp40	G047H0213  Danfoss Overload Relay Ti25c 15.00-20.00a For Dp30 And Dp40	G047H0214  Danfoss Overload Relay Ti25c 19.00-25.00a For Dp30 And Dp40
G047H0215  Danfoss Overload Relay Ti30c 24.00-32.00a For Dp40	G047H1013  Danfoss Overload Relay Ti80 16.00-23.00a For Dp50	G047H1014  Danfoss Overload Relay Ti80 22.00-32.00a For Dp50	G047H1015  Danfoss Overload Relay Ti80 30.00-45.00a For Dp50	G047H1016  Danfoss Overload Relay Ti80 42.00-63.00a For Dp50